

# ATP61 – 30MM ADJUSTABLE ELEVATION EXTRA HIGH INSTRUCTIONS

It is important that these instructions are followed in order for this product to function correctly.

- 1) Easyfit recoil pin included.
- 2) Fit mounts and scope to rifle in usual way and check adjuster locking screws (A) are securely tightened.
- 3) Shoot a five shot group at approximately 25 yards. Measure vertical distance from aiming point.
- 4) To correct elevation loosen locking screws (A) on front and rear mount using 2.5mm allen key. Turn adjuster screw (B) clockwise to lift rear of scope using 2mm allen key ( $\frac{1}{4}$  turn = approx 22mm at 25 yards). Retighten locking screws (A) FIRMLY. To lower rear of scope undo locking screws (A), push down on top of rear mount and turn adjuster screw (B) anti-clockwise as required. Retighten locking screws FIRMLY.

NOTE: Both front and rear mount adjusters can be used to lift scope evenly if required.  
Maximum adjustment is 2 turns which = 1.3mm of full adjustment.

